1

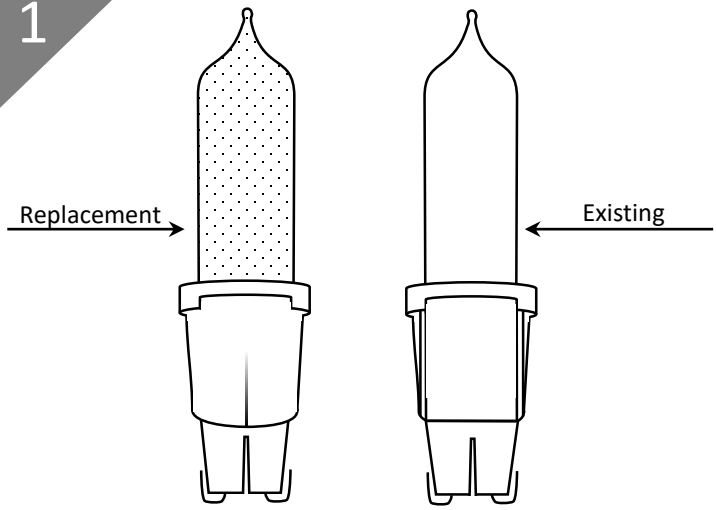

You may find slight differences between replacement and existing bulb housings. If the replacement bulb diameter is the same (or slightly less), follow these steps to resolve the issue.

2

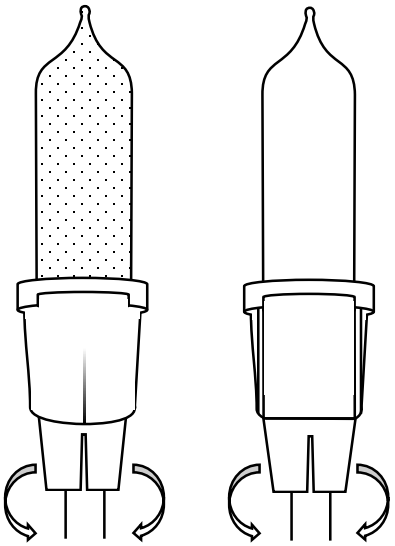

On your existing *and* replacement bulbs, straighten the wires at the bottom of each bulb.

3

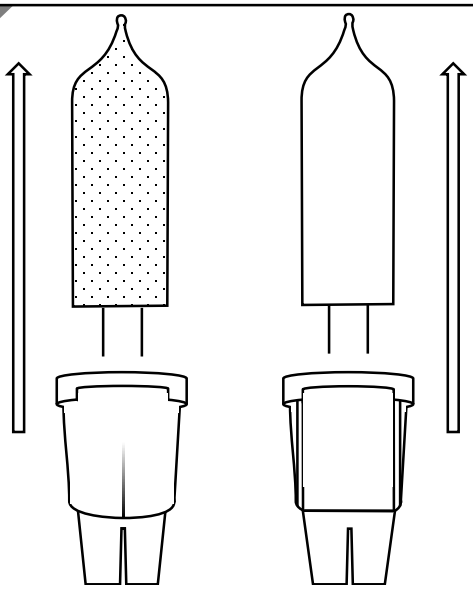

Slip the bulbs out of the bulb housings.

4

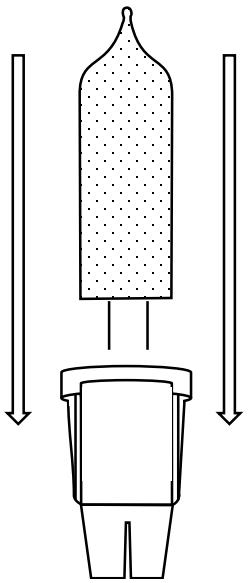

Feed the wires of the bulb from the replacement into the existing bulb housing.

5

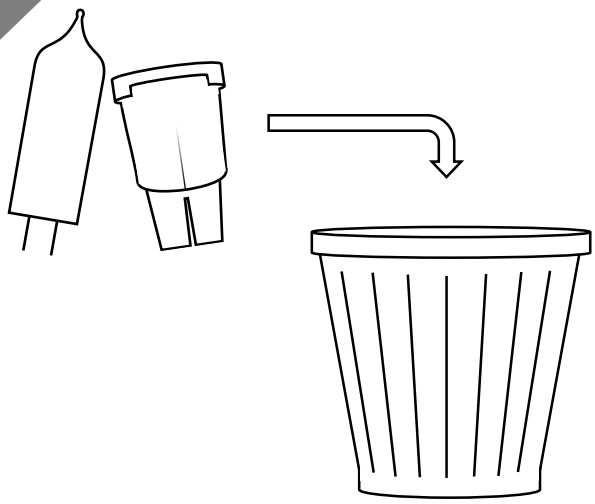

Discard the faulty/blown bulb and replacement bulb housing.

6

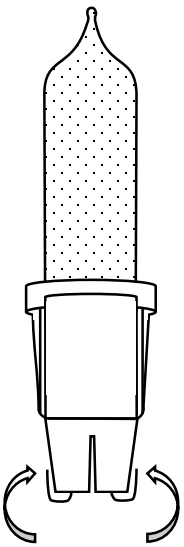

Bend the wires back into place. You should now have a working bulb in the correct housing for your set.